

Concerning Compact Discs



Only compact discs bearing this mark can be used with this unit.

However, continued use of irregular shape CDs can damage the unit.



How to remove a disc from its case



How to store the disc in its case

 


How to hold a disc



If the surface is dirty

Wipe it with a damp cloth and then wipe dry. Wipe from the center toward the outer circumference.



If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe it off using a soft dry cloth.

When storing discs

- Avoid locations which are
- Exposed to direct sunlight.
- Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

Handling precautions

- On the label side (the side with writing) Do not write anything using a pencil, ball-point pen, etc. Do not stick paper or labels.
- On the disc (shiny) side Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.
- Do not attach labels or stickers to CD's.
- Do not use CDs with exposed adhesives from tape or left over peeled off stickers.
- Do not use scratch-proof protectors or covers other than those specified for use with this unit.

Panasonic Consumer Electronics Company, Division of

Matsushita Electric Corporation of America

One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")

Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W2T3

www.panasonic.ca

www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

http://www.panasonic.com

Portable CD player

Panasonic

Operating Instructions

SL-S360/SL-S365 SL-S361C/SL-S362C



The model number and serial number of this product can be found on either the back or the bottom of the unit.

Please note them in the space provided below and keep for future reference.

MODEL NUMBER _____
SERIAL NUMBER _____

SL-S361C/SL-S362C ONLY

To install this product in a car, please refer to "Installation Instructions" (attached sheet).

SL-S365/SL-S362C models only for U.S.A.

Supplied Accessories

Check the packing carton for these accessories.

AC adaptor 1 pc.

SL-S360/SL-S365 (RFEA415C-S)

SL-S361C/SL-S362C (RFEA403C-15)

For Canada

Stereo earphones 1 pc.

(RFEV324P-KS)

For U.S.A.

Stereo headphones 1 pc.

SL-S360/SL-S361C/SL-S362C

(RFEV705P-KS)

SL-S365 (RFEV711P-KS)

SL-S362C ONLY

Wireless remote control 1 pc.

(RAK-LS327WH)

Battery for wireless remote control ... 1 pc.

(CR2025/1P0D)

Hook and loop fastener 1 pc.

(RMF0255)

SL-S365 ONLY

Wired remote control 1 pc.

(RFEV015PCKS)

Rechargeable Ni-Cd batteries 1 pc.

(RP-BP60BPYS1)

Battery carrying case 1 pc.

(RPNLS370-K)

Remove the rechargeable batteries from

their case before use.

SL-S361C/SL-S362C ONLY

Car adaptor 1 pc.

For U.S.A.

(SH-CDC10PY)

For Canada

(SH-CDC11PCY)

Car stereo cassette adaptor 1 pc.

(SH-CDM10BPYK)

Use numbers indicated in parentheses when asking for replacement parts.

(Only for U.S.A.) To order accessories contact 1-800-332-5366 or web site

(http://www.panasonic.com).

Before connecting, operating or adjusting this product, please read these instructions completely. Please save this manual.



Precautions

Before using this unit, be sure to read the applicable items of the operating instructions and these safety suggestions carefully.

Afterwards keep them handy for future reference. Take special care to follow the warnings indicated on the unit itself as well as in the operating instructions.

Safety

- Power Source**—The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit. Use only the AC adaptor or car adaptor described in the operating instructions when recharging.
- Polarization**—If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Care of AC adaptor**—Take care that the cord of the AC adaptor should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the AC adaptor if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
- Nonuse Periods**—When not in use, be sure to disconnect the AC adaptor from the AC power outlet.
- Batteries**—If the set is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to possible battery leakage. Do not mix batteries (old and new) or different types of batteries.

Installation

■ Environment

- Water and Moisture**—Do not use this unit near water—for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
- Condensation**—Moisture may form on the lens in the following conditions.
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one. If moisture forms inside this unit, it may not operate properly. To correct this problem wait about one hour for the moisture to evaporate.
- Heat**—Never use or place this unit near a heat source. Do not leave it in an automobile exposed to direct sunlight for a long time with the doors and windows closed as this may deform the cabinet.

■ Placement

- Foreign Material**—Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
- Magnetism**—The unit should be situated away from equipment or devices that generate strong magnetic fields.
- Stacking**—Do not place any objects, on top of the unit.

Maintenance

(See page 7 for details.)

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

Service

- Damage Requiring Service**—The unit should be serviced by qualified service personnel when:
 - The AC adaptor is damaged; or
 - Objects have fallen or liquid has been spilled into the unit; or
 - The unit has been exposed to rain; or
 - The unit does not appear to operate normally or exhibits a marked change in performance; or
 - The unit has been dropped, or the enclosure damaged.
- Servicing**—The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to an authorized service personnel.
For the address of an authorized servicenter:
In the U.S.A. 1-800-211-7262 or web site
(http://www.panasonic.com)
In Canada 905-624-5505 or web site
(www.panasonic.ca/fdbckca.htm)



 
This manual was printed with soy based ink.


Power Supply Preparations

Refer to the specifications (page 8) for information on operating times when using rechargeable batteries or dry-cell batteries.

Using the AC adaptor

Connect the AC adaptor supplied.

DC IN jack ( DC IN 4.5 V)

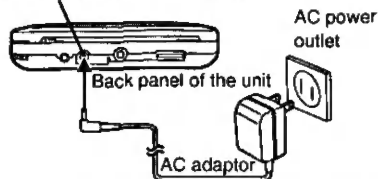 

The configuration of the AC adaptor differs according to the model.

Using rechargeable batteries

 
Obtain the optional rechargeable batteries for SL-S360, SL-S361C and SL-S362C.

Make sure to recharge the batteries before using them. The unit cannot be used to charge rechargeable batteries other than those specially designed for it.

- Supplied batteries for SL-S365 (RP-BP60)
- Optional batteries (P-3GAVA/2B, SH-CDB8D)

Recharging procedure

- 1 Insert the special rechargeable batteries into the unit.

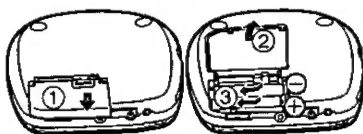

- 2 Connect the AC adaptor.

(Refer to "Using the AC adaptor" for connection instructions.)

 
Recharging starts and the "CH" charging indicator flashes on and off on the unit's display panel. When the rechargeable batteries fully recharge the charging indicator disappears.

- 3 When recharging is complete, unplug the AC adaptor from the power outlet and the DC IN jack.


Note

- It takes approximately 3 hours to fully recharge the supplied rechargeable batteries. (SL-S365)
- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
- Recharging may only be performed when the unit is powered off. (It is not possible to recharge the batteries while playing a CD.)
- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is not a malfunction.

If the battery lid comes loose
Slide the lid back into place horizontally.

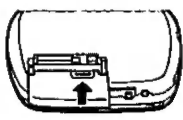

 Removing batteries
Push up on the battery in the direction indicated by the arrow. Then lift it out.

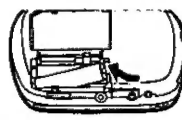

Using the car adaptor

The SL-S361C and SL-S362C come with a car adaptor. Be sure to use the adaptor specially designed for these models.

(Refer to the separate installation instructions.)

Be sure to obtain the car adaptor (SH-CDC9) for SL-S360 and SL-S365, available as an optional accessory. The car adaptor can be used to recharge the unit's batteries while in the car.

CAUTION: (SL-S360/SL-S365)

 
Use only car adaptor, Model: SH-CDC9 manufactured by Matsushita Electric Industrial Co., Ltd.

Using dry-cell batteries (not included)

After disconnecting the AC adaptor, insert two "AA" (LR6) alkaline batteries.

The procedure for inserting and removing dry-cell batteries is identical to that for rechargeable batteries.

Battery indicator



This indicator flashes on and off when the batteries are almost out of power. Power is cut off completely a short while later.

Rechargeable batteries: Recharge batteries.

Dry-cell batteries: Replace batteries with new ones.

 
Note

- The length of time the unit will continue to operate between when the battery indicator starts flashing and when the power is cut off differs depending on the type of batteries used.
- The battery indicator may not flash if rechargeable batteries, other than those designated by Panasonic, are used.

If the unit malfunctions or freezes during use, then disconnect the power sources (the AC adaptor and batteries).


Re-connect the power source and continue operation.

Location of Controls

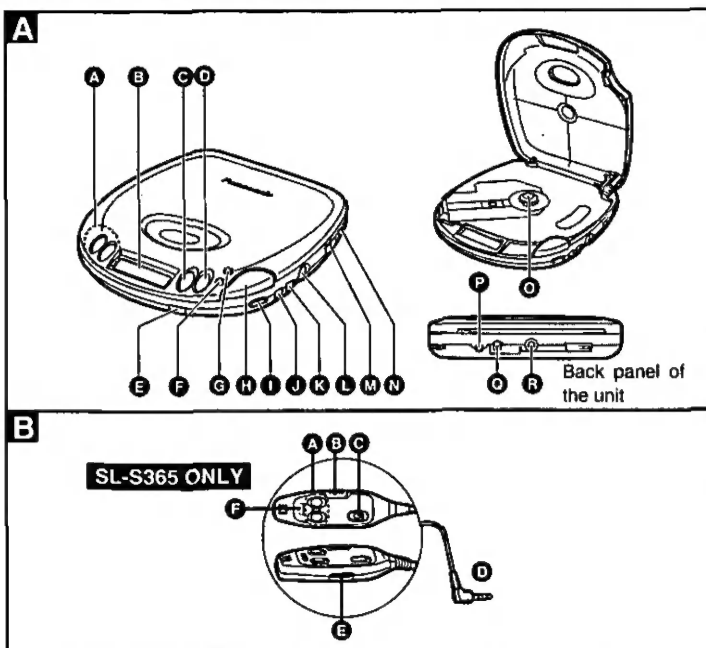

Portable CD player A

 - A Skip/search buttons (, , , )
- B Display
- C Stop/power off button (, POWER OFF)
- D Play/pause button ()
- E **SL-S362C ONLY**
Remote sensor (SENSOR)
- F Repeat button (REP)
- G Memory/recall button (MEMORY/RECALL)
- H Open button (OPEN)
- I Headphones volume control (VOLUME)
- J Anti-shock button (A.SHOCK)
- K S-XBS button (S-XBS)
- L Headphone jack ()
- M Play mode selector (RESUME, NORMAL, RANDOM)


- N Hold switch (HOLD)
- O CD release button (PUSH)
- P Out jack (OUT)
- Q DC in jack ( DC IN 4.5 V)
- R Hole for car insulator mounting screw

Wired remote control

SL-S365 ONLY B

- A Skip/search buttons (+, -)
- B Hold switch (HOLD)
- C Play/stop/off button
- D Plug
- E Volume control (VOL)
- F Hold indicator

 Sequential Play Basic Play

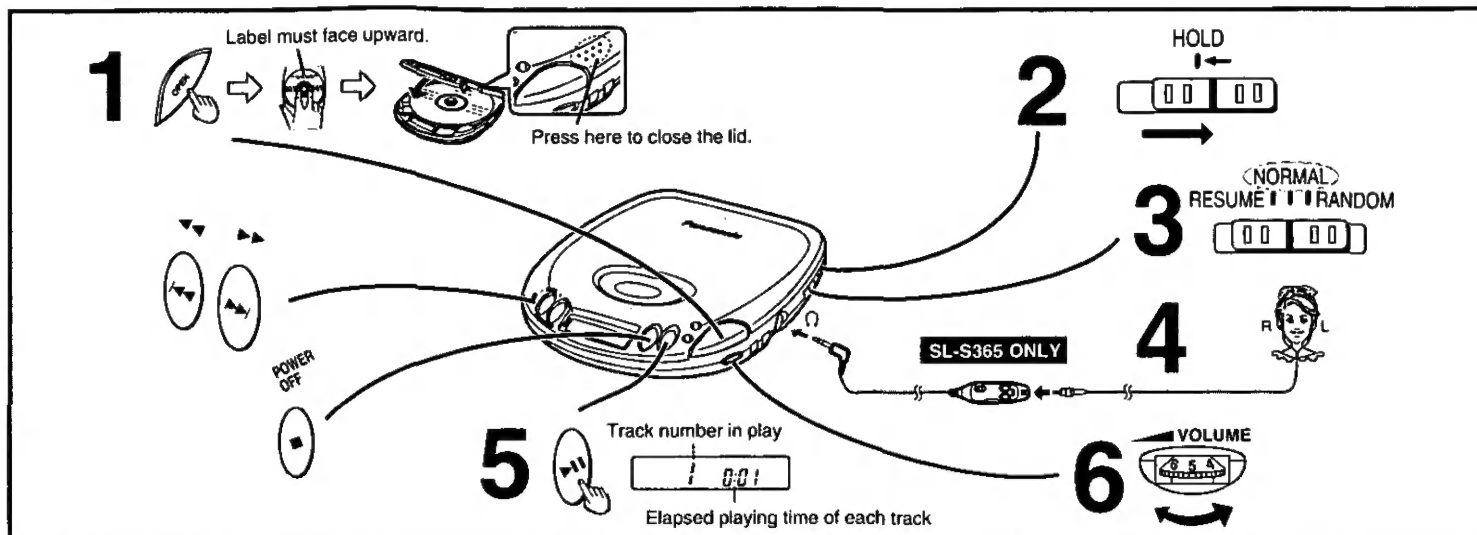

Follow steps 1-6.

In step 4, connect the stereo headphones/earphones to the jack. (Plug in firmly.)

• Play stops automatically when all the tracks have been played.

• If the unit has been connected to the car audio system, adjust the volume level between 4 and 6 on the unit, then adjust the volume level on the system.

Operation	Button	Display/reference
To pause play	Press during play.	 Press again to restart play.
To stop play Stop mode	Press during play.	Total number of tracks Total playing time
To turn off the unit Off mode	Press during stop mode.	
Skip forward/ backward (skip function)	Press during play. (Backward) (Forward) 	<ul style="list-style-type: none"> • During program play (page 4), these buttons are used to skip forward or back through the programmed sequence of tracks. • During random play (page 4), the skip buttons cannot be used to skip back to tracks that were played previously in the random sequence. • During program play, random play or 1 track repeat play (page 4), search operation is limited to the current track only.
Rapid forward/ backward (search function)	 Keep depressed during play.	

For your reference:

"no disc" indication

This indication appears for about 30 seconds if is pressed when no disc is loaded in the unit or if the disc is not completely seated.

"open" indication

 
This indication appears for about 10 minutes when the cover is opened. (However, the indication does not appear when the unit is powered off.)

Note

Never insert foreign objects into the unit body.

Removing discs

After the disc has stopped rotating, press [PUSH] to release the disc. (To protect the disc, never open the cover while it is playing.)

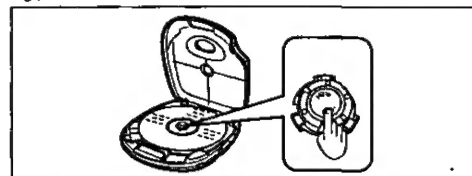

Auto power off function

 
If the unit is left in stop or paused status for approximately 10 minutes, the unit powers itself off automatically in order to prevent the battery from running down. (If no disc is loaded in the unit, it powers itself off in 30 seconds.)

SL-S361C/SL-S362C ONLY

Backlight

The backlight comes on to illuminate the display panel when the unit is used with a AC adaptor or car adaptor.

HOLD Function

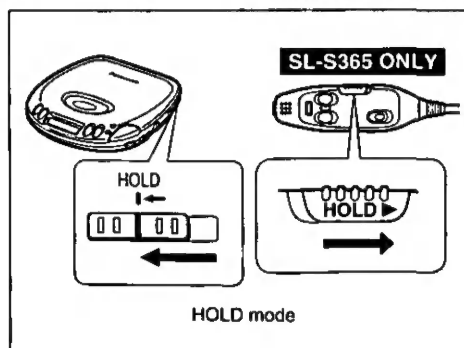

This function causes the unit to ignore short, accidental button presses. (The disc lid can still be opened and closed.)

The HOLD function prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly in the middle of a selection.

To use the HOLD function

Set [HOLD] to the HOLD position.

SL-S365 ONLY

The unit and wired remote control have [HOLD] switches, each of which works independently. (The hold indicator lights green when the remote control is in hold position.)

"hold" indication

When the unit is in hold status, pressing any button (other than the OPEN button) causes the indication "hold" to appear on the display.

When the unit is powered off

The "hold" indication appears only when is pressed.

Before operating the buttons

Be sure to move [HOLD] to release the unit from the hold mode.

Other Play Methods

 
The letters such as **A** in the various illustrations refer to the descriptions in the "Location of Controls" section (see page 2).

Skip play

The disc plays from the specific track through to the end, then play stops automatically.

Preparation: Put unit in stop mode.

1



2 Select the desired track.



3



Program play

Up to 24 tracks can be entered in the programmed sequence.

Preparation: Put unit in stop mode.

1

 


2 Select the desired track.



3 Register in sequence.

(The indication "M" and the programmed sequence appear on the display panel.)



4 Repeat steps 2 and 3 to program all the desired tracks.

5



■ To program the same track in the sequence more than once

After step 3, press [MEMORY/RECALL] desired number of times.

■ If "F" is displayed

No more tracks can be programmed.

■ To confirm the contents of the program

Press [MEMORY/RECALL] while the disc is playing. (The number of the programmed tracks appear on the display panel in the sequence.)

■ To delete the entire programmed sequence

 
Press [M], [POWER OFF].

Random play


1



2



Release

 


For your reference:


- It is also possible to press [D] while the unit is in stop status to change the first track to be played. (All tracks are played eventually, regardless of which is played first.)
- Program play is not possible in the random mode.

Resume play

 This function allows you to listen from the beginning of the track where play stopped because the unit was powered off (or switched to stop status). It is useful when listening to CDs in the car, etc.



Release

 

For your reference:

- If the [RESUME, NORMAL, RANDOM (play mode)] slider is put in the [RESUME] position, the all-repeat function will be activated automatically as soon as the unit is powered on.
- If power is cut off near the end of a track (power off status), playback may resume from the beginning of the next track.
- If the unit is powered off while a disc was playing and then a new disc is inserted, play will begin from the middle of the new disc because the unit remembers the position where play stopped on the previous disc.

Repeat function

Press during play or stop mode.



The setting is switched in the sequence indicated below each time [REP] is pressed.

1-track repeat (1) →

One track is repeated.

All-track repeat (ALL) →

All the tracks on the disc are repeated.

 
Cancel →

For your reference:

If [REP] is pressed during program play, only the tracks in the program are repeated. (The indication "ALL" is not displayed.)

Changing the sound quality

Press during play or stop mode.



The setting switches in the sequence indicated below each time [S-XBS] pressed.

S-XBS → Normal (no indicator is shown)

S-XBS:

 
Select this setting to boost the low-range response.




Anti-Shock Function

Anti shock works by reading audio data and storing it in memory (up to 40 seconds worth). The unit then fills in interruptions caused by bumps and vibrations with data from the memory. This unit also incorporates a powerful anti-shock mechanism that prevents skipping caused when play speed is changed by swinging of the unit.

Press during play or stop mode.



 The following indicator appears on the display panel.




Note

If you have pressed [A.SHOCK] when the unit is in stop status, press [D] to start play.

When bumps continue repeatedly

 The following indicator appears on the display panel and sound is interrupted.



To cancel the anti-shock function

Press [A.SHOCK] again.

Note

- The anti-shock setting can be changed during play, but this may cause a slight interruption in the sound because the disc's rotation speed changes.
- During anti-shock operation, the disc rotates at a higher rate than usual to collect extra audio data. This could result in a slight increase in disc rotation noise.

Using the unit with an audio system

 
The anti-shock function uses digital signal compression technology. It is recommended that the anti-shock function be canceled if the unit is connected to a home audio system.

Using the Remote Control SL-S365 ONLY

The remote control can be operated regardless of the hold mode of the unit.

Preparation:

Release the remote control from the hold mode.

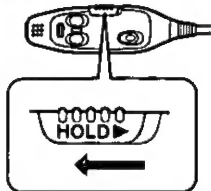

Operation confirmation tones

When an operation button is pressed, a confirmation tone sounds. Refer to the parentheses in the illustration for the different types of confirmation tones.


How to use the wired remote control

To start play	Press once during off or stop mode. (Beep)	Skip forward/backward	Press once during play. Forward (Beep Beep)
To stop play	Press once during play. (Beep...Beep)	Rapid forward/backward	 (Beep Beep Beep) Backward
To turn off the unit	Press and hold during play or stop mode. (Beep...Bee...p)	To adjust the volume	When adjusting the volume using the remote control, position the volume control on the unit between 4 and 6. Press and hold during play.

Using the Wireless Remote Control SL-S362C ONLY

Preparation

 Installing the lithium battery

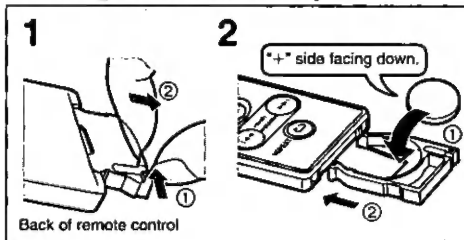

Note

- The wireless remote control can be operated regardless of the hold mode of the unit.
- Do not place any object which will block the path of the signals between the remote control and the unit.
- Do not allow the remote sensor or transmitter to become dusty.
- Do not leave the remote control standing in direct sunlight or in high temperature locations in a car.
- In the interest of traffic safety, do not operate the remote control while driving.
- Take every care to prevent small children from putting the lithium battery in their mouths or swallowing it. In the event that a child has swallowed a battery, consult with a physician immediately.

Operation

Preparation:

When the unit is to be operated using rechargeable batteries or dry cell batteries, first press **▶ ||** on the unit and then use the remote control. (The unit cannot be operated by the remote control while the unit is turned off.)

	Initiates play/establishes pause mode when pressed again.
	Stops play/turns the unit off when kept depressed.
	Skip tracks (tap). Rapidly searches forward or backward during play (keep depressed).
	Repeats all tracks or single track.

 
Remote control's operating range

- Point the transmitter on the remote control at the remote sensor on the unit.
- Use the remote control within a 7-meter range of the remote sensor on the unit. (Depending on the angle of the remote control, the signals may not reach the sensor.)

How to use the hook and loop fastener

To prevent misplacement of the remote control, it is recommended that the hook and loop fastener be used as shown in the figure below.

Back of remote control

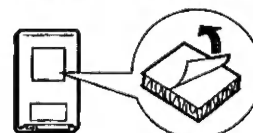

- Adhere the hook and loop fastener roughly in the center of the remote control's back surface.
- Before adhering the hook and loop fastener, choose a flat and even surface and wipe off any dirt.
- Avoid a location which is exposed to direct sunlight.

CAUTION:

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate. Replace battery with Panasonic part number CR 2025/1P0D only. Use of another battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

Using the Unit with Optional Accessories

 
Using the unit with an audio system

Using stereo connection cable (not included), you can hear CDs on your audio system.

- Connect the cable to the amplifier after turning off its power.
- Do not connect the cable to the PHONO jacks on the amplifier.
- Obtain the optional connecting cable if the amplifier comes with mini-phone jacks.
- Adjust the volume on the amplifier.
- Sound quality changes when S-XBS is selected, but volume is reduced by approximately fifty percent.

SL-S365 ONLY

When using active speakers or other speakers, ensure that they have an input impedance of 1kΩ or less.

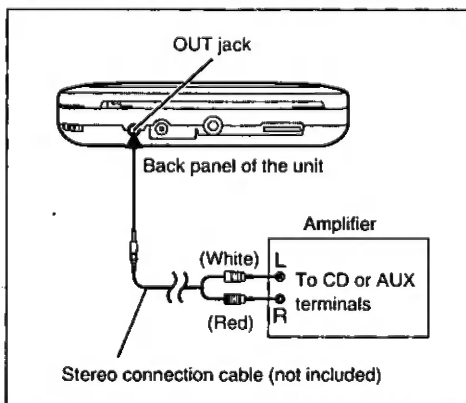

Using the unit with a car audio system

The SL-S361C/SL-S362C come with the car adaptor and car stereo cassette adaptor. Please refer to the "Installation Instructions" (attached sheet).

Items to be purchased (SL-S360/SL-S365)

For connection to the car audio system

Car stereo cassette adaptor (SH-CDM10A)

Connect the car stereo cassette adaptor to the unit's headphones jack.

(When doing this, keep the unit's VOLUME control at a setting between 4 and 6.)

For securing the unit and connecting the power supply:

- Car adaptor (SH-CDC9)
- Car mounting kit (SH-CDF7)
- Car mounting arm, Car insulator

Note

It may not be possible to use the unit with some types of car stereos owing to restrictions imposed by the construction of the car stereo cassette adaptor.

For further details, refer to the instructions of the part concerned.

ONLY FOR U.S.A.

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

1-800-211-PANA (7262), Monday-Friday 9 am-9 pm Saturday-Sunday 9 am-7 pm, EST.

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday-Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Factory Servicenters Locations

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco
CA 94080

20201 Sherman Way
Suite 102
Canoga Park, CA 91306

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO

1640 South Abilene Street
Suite D
Aurora, CO 80012

FLORIDA

3700 North 29th Avenue
Suite 102
Hollywood, FL 33020

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS

9060 Golf Road
Niles, IL 60714

1703 North Randall Road
Elgin, IL 60123
(Pick-up/Drop-off only)

MARYLAND

62 Mountain Road
Glen Burnie, MD 21061

MASSACHUSETTS

60 Glacier Drive
Suite G
Westwood, MA 02090

MICHIGAN

37048 Van Dyke Avenue
Sterling Heights, MI 48312

MINNESOTA

7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425

OHIO

2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd. West
Suite B
Langhorne, PA 19047

Chartiers Valley
Shopping Center
1025 Washington Pike
Bridgeville, PA 15017

TENNESSEE

3800 Ezell Road
Suite 806
Nashville, TN 37211

TEXAS

7482 Harwin Drive
Houston, TX 77036

13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON

20425-84th Avenue South
Kent, WA 98032

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808) 488-1996
Fax (808) 486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory Servicer.
Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America
One Panasonic Way,
Secaucus, New Jersey 07094

Panasonic Audio Products Limited Warranty

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel. (809) 750-4300
FAX. (809) 768-2910

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "The warrantor") will repair this product with new or refurbished parts, free of charge, in the U.S.A. or Puerto Rico from the date of original purchase in the event of a defect in materials or workmanship as follows:

AUDIO COMPONENTS, RADIOS, COMPACT DISC PLAYERS, VIDEO CD PLAYERS AND HOME ENTERTAINMENT SYSTEMS—For one (1) year.

ACCESSORIES, HEADPHONES AND CARTRIDGES—(when applicable) For ninety (90) days.

BATTERIES—(when applicable)—New rechargeable batteries in exchange for defective rechargeable batteries—For ten (10) days. Non-rechargeable batteries are not warranted.

RECHARGEABLE BATTERY PACKS—(when applicable)—New rechargeable battery packs in exchange for defective rechargeable battery packs for (90) days. Non-rechargeable battery packs are not warranted.

Carry-in or mail-in service in the continental U.S.A. can be obtained during the warranty period from a Panasonic Services Company (PASC) Factory Servicer listed in the Servicer Directory. Or call 1-800-211-7262, toll free, to locate an authorized PASC Servicer. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the telephone numbers listed in the Servicer Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

This warranty only covers failures due to defects in materials or workmanship

which occur during normal use and does not cover normal wear to the stylus (when applicable) or dealer installed cartridge or stylus. It does not cover damage which occurs in shipment or failures which are caused by products not supplied by the warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, improper antenna, inadequate signal pick-up, maladjustment of consumer controls, modification, or commercial use of product, or service by anyone other than a PASC Factory Servicer or authorized PASC Servicer, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO TAPES RECORDS OR DISCS. ALL EXPRESS AND IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicer. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Division at the company address indicated above.

Product Service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

 
For product service, product information or assistance with product operation, refer to the servicenter directory.

User memo:

DATE OF PURCHASE _____
DEALER NAME _____
DEALER ADDRESS _____
TELEPHONE NUMBER _____

Maintaining the Lens

Open the lid and clean the lens as shown in the figure. Use a cotton swab to gently wipe off any finger-prints. Recommended product: Lens cleaner kit (SZZP1038C)

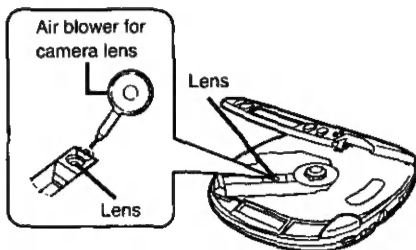

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASHING, DRIPPING OR MOISTURE.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

The product you have purchased is powered by a nickel-cadmium battery which is recyclable.

Please call 1-800-8-BATTERY for information on how to recycle this battery.



THE FOLLOWING APPLIES ONLY IN THE U.S.A.:

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-affixed letter, detailing the complaint, to the outside of the carton.

Do NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

Customer's Record

Model No. _____
Serial No. _____
or _____
Code No. _____
Date of Purchase _____

Dealer's Name _____
Dealer's Address _____

Specifications

Audio

No. of channels: 2 (left and right, stereo)

Frequency response: 20 to 20,000 Hz (+0.5 dB to -1.5 dB)

Output voltage: 0.6 V (50 kΩ)
S/N: More than 94 dB*
Wow and flutter: Below measurable limit
DA converter: 1 bit, MASH
Headphones output level: Max. 9 mW+9 mW/16Ω (adjustable)

Pickup

Light source: Semiconductor laser
Wavelength: 780 nm

General

Operational temperature range: 0°C-40°C (32°F-104°F)

Rechargeable temperature range: 5°C-40°C (41°F-104°F)

Power supply: DC 4.5 V

Power consumption:

Power source	Anti-shock OFF/ON
AC adaptor	2.9 W/3.0 W

When recharging: Approx. 4.0W

Play time:

[When used in hold mode, at 25°C (77°F) temperature and on flat and stable surface]

Batteries used	Anti-shock OFF/ON
2 alkaline batteries	About 22h/25h SL-S362C About 20h/22h
Rechargeable batteries (RP-BP60, SH-CDB8D)	About 6h/6.5h SL-S362C About 5h/5.5h
Optional rechargeable batteries (P-3GAVA/2B)	About 10h/11h SL-S362C About 9h/10h

The play time may be less depending on the operating conditions.

Recharging time:

RP-BP60: About 3 hours
P-3GAVA/2B: About 5 hours
SH-CDB8D: About 3 hours

Dimensions

(W×H×D): 128×25.8×144 mm
(5 1/8"×1 1/2"×5 1/4")
257 g (9.1 oz.) (with batteries)
212 g (7.5 oz.) (without batteries)

Weight:

*These specifications were measured in the anti-shock OFF mode.

Note:

Specifications are subject to change without notice.

Weight and dimensions are approximate.

Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

For detailed instructions, contact an authorized servicenter in the U.S.A. and Panasonic Canada Inc. Customer Care Centre in Canada.

In the U.S.A. 1-800-211-7262 or web site (<http://www.panasonic.com>)
In Canada 905-624-5505 or web site (www.panasonic.ca/faq.html)

Problem	Check this
Cannot close cover.	Is the disc properly secured in place?
Cannot play discs.	<ul style="list-style-type: none"> Is the unit in hold status? Is the disc properly secured in place? Is there condensation on the lens? (Wait for about an hour and then try again.)
Cannot remove disc.	Did you press the [PUSH] to release the disc?
Tracks on disc do not play in order, starting with the first track.	Is the [RESUME, NORMAL, RANDOM] (play mode) slider in the [NORMAL] position?
Cannot hear music—too noisy.	<ul style="list-style-type: none"> Is the headphones/earphones plug inserted all the way? Is the plug dirty? (Wipe away dirt on plug.)
TV picture is distorted. Radio reception is noisy.	Are you using the unit body too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
SL-S362C ONLY No operation with wireless remote control	<ul style="list-style-type: none"> Is the unit turned off while rechargeable batteries or dry cell batteries are being used? Press [▶] on unit and then proceed with operation. Has lithium battery been inserted? If it has, is its voltage low?

Cautions

Listening caution



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Rechargeable batteries

- Only the RP-BP60, P-3GAVA/2B, SH-CDB8D batteries can be recharged.
- If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
- Recharging already charged batteries will shorten their service life.
- When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
- Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.
- Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

Dry cell batteries/rechargeable batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Do not mix different types or makes of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

Carrying dry cell batteries/rechargeable batteries around

When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire. Be absolutely sure to carry the rechargeable batteries in the battery carrying case.

 
When purchasing rechargeable batteries

As a safety precaution, the portable CD players made by Panasonic have a construction designed to make it impossible to recharge ordinary batteries.

To use rechargeable batteries, be absolutely sure to purchase the rechargeable Ni-Cd batteries designed especially for this unit.

Special rechargeable Ni-Cd batteries:
P-3GAVA/2B, SH-CDB8D (set of 2)

For details, check with your dealer.

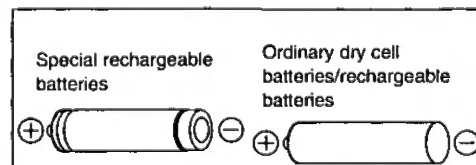

When driving a car

In the interest of traffic safety, do not operate the unit while driving.